

To get started, put the cut-resistant glove on your non-dominant hand. Place the knife sharpener on a flat, stable surface. Hold the tool you want to sharpen with your dominant hand.

You'll notice the three slots are each labeled with an icon.

The slots marked with single and double straight lines (I, II) are intended for straight blades. The slot with a wavy line is for serrated blades.



TO SHARPEN STRAIGHT BLADES



- 1 Begin by placing the knife in the slot marked with the single straight line (I). Pull back several times to coarsely sharpen and restore the V-shape cutting edge. Use one direction only. Don't apply downward pressure.
- 2 Next, move the knife to the slot marked with two straight lines (II). Pull back several times to finely sharpen, polish and eliminate burrs on the blade.
- 3 When you're done, clean the knife with a wet cloth and flip the sharpener over to shake out metal shavings.

TO SHARPEN SERRATED BLADES



- 1 Place your knife in the slot marked with a wavy line. Beginning at the base of the knife, gently flick the blade away from you. Repeat the process until you reach the tip of the knife.
- 2 Please note that this is the only safe and effective way to sharpen serrated blades. Pulling it through the sharpener will damage your knife.
- 3 Don't forget to clean the knife and sharpener after use.

TO SHARPEN SCISSORS



- ! Firmly grip them by the handles and insert them in the slot located on the handle of the product. Lightly close the scissors over the ceramic rod, and pull back several times.